


## Typical Road Surface Drainage by Rolling Dips

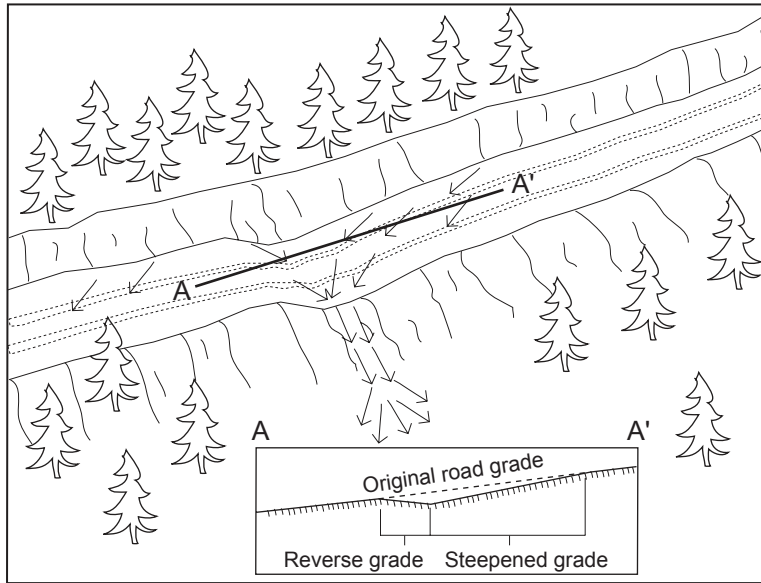

### Rolling dip installation:

1. Rolling dips will be installed in the roadbed as needed to drain the road surface.
2. Rolling dips will be sloped either into the ditch or to the outside of the road edge as required to properly drain the road.
3. Rolling dips are usually built at 30 to 45 degree angles to the road alignment with cross road grade of at least 1% greater than the grade of the road.
4. Excavation for the dips will be done with a medium-size bulldozer or similar equipment.
5. Excavation of the dips will begin 50 to 100 feet up road from where the axis of the dip is planned as per guidelines established in the rolling dip dimensions table.
6. Material will be progressively excavated from the roadbed, steepening the grade until the axis is reached.
7. The depth of the dip will be determined by the grade of the road (see table below).
8. On the down road side of the rolling dip axis, a grade change will be installed to prevent the runoff from continuing down the road (see figure above).
9. The rise in the reverse grade will be carried for about 10 to 20 feet and then return to the original slope.
10. The transition from axis to bottom, through rising grade to falling grade, will be in a road distance of at least 15 to 30 feet.

**Table of rolling dip dimensions by road grade**

Road grade %	Upslope approach distance (from up road start to trough) ft	Reverse grade distance (from trough to crest) ft	Depth at trough outlet (below average road grade) ft	Depth at trough inlet (below average road grade) ft
<6	55	15 - 20	0.9	0.3
8	65	15 - 20	1.0	0.2
10	75	15 - 20	1.1	0.01
12	85	20 - 25	1.2	0.01
>12	100	20 - 25	1.3	0.01

Pacific Watershed Associates Inc.

Geologic and Geomorphic Studies • Watershed Restoration • Wildland Hydrology • Erosion Control • Environmental Services  
PO Box 4433, Arcata, CA 95518 / Ph: 707-839-5130 / FAX: 707-839-8168 / www.pacificwatershed.com